



HOW IT'S WORK – Lifting Anchors

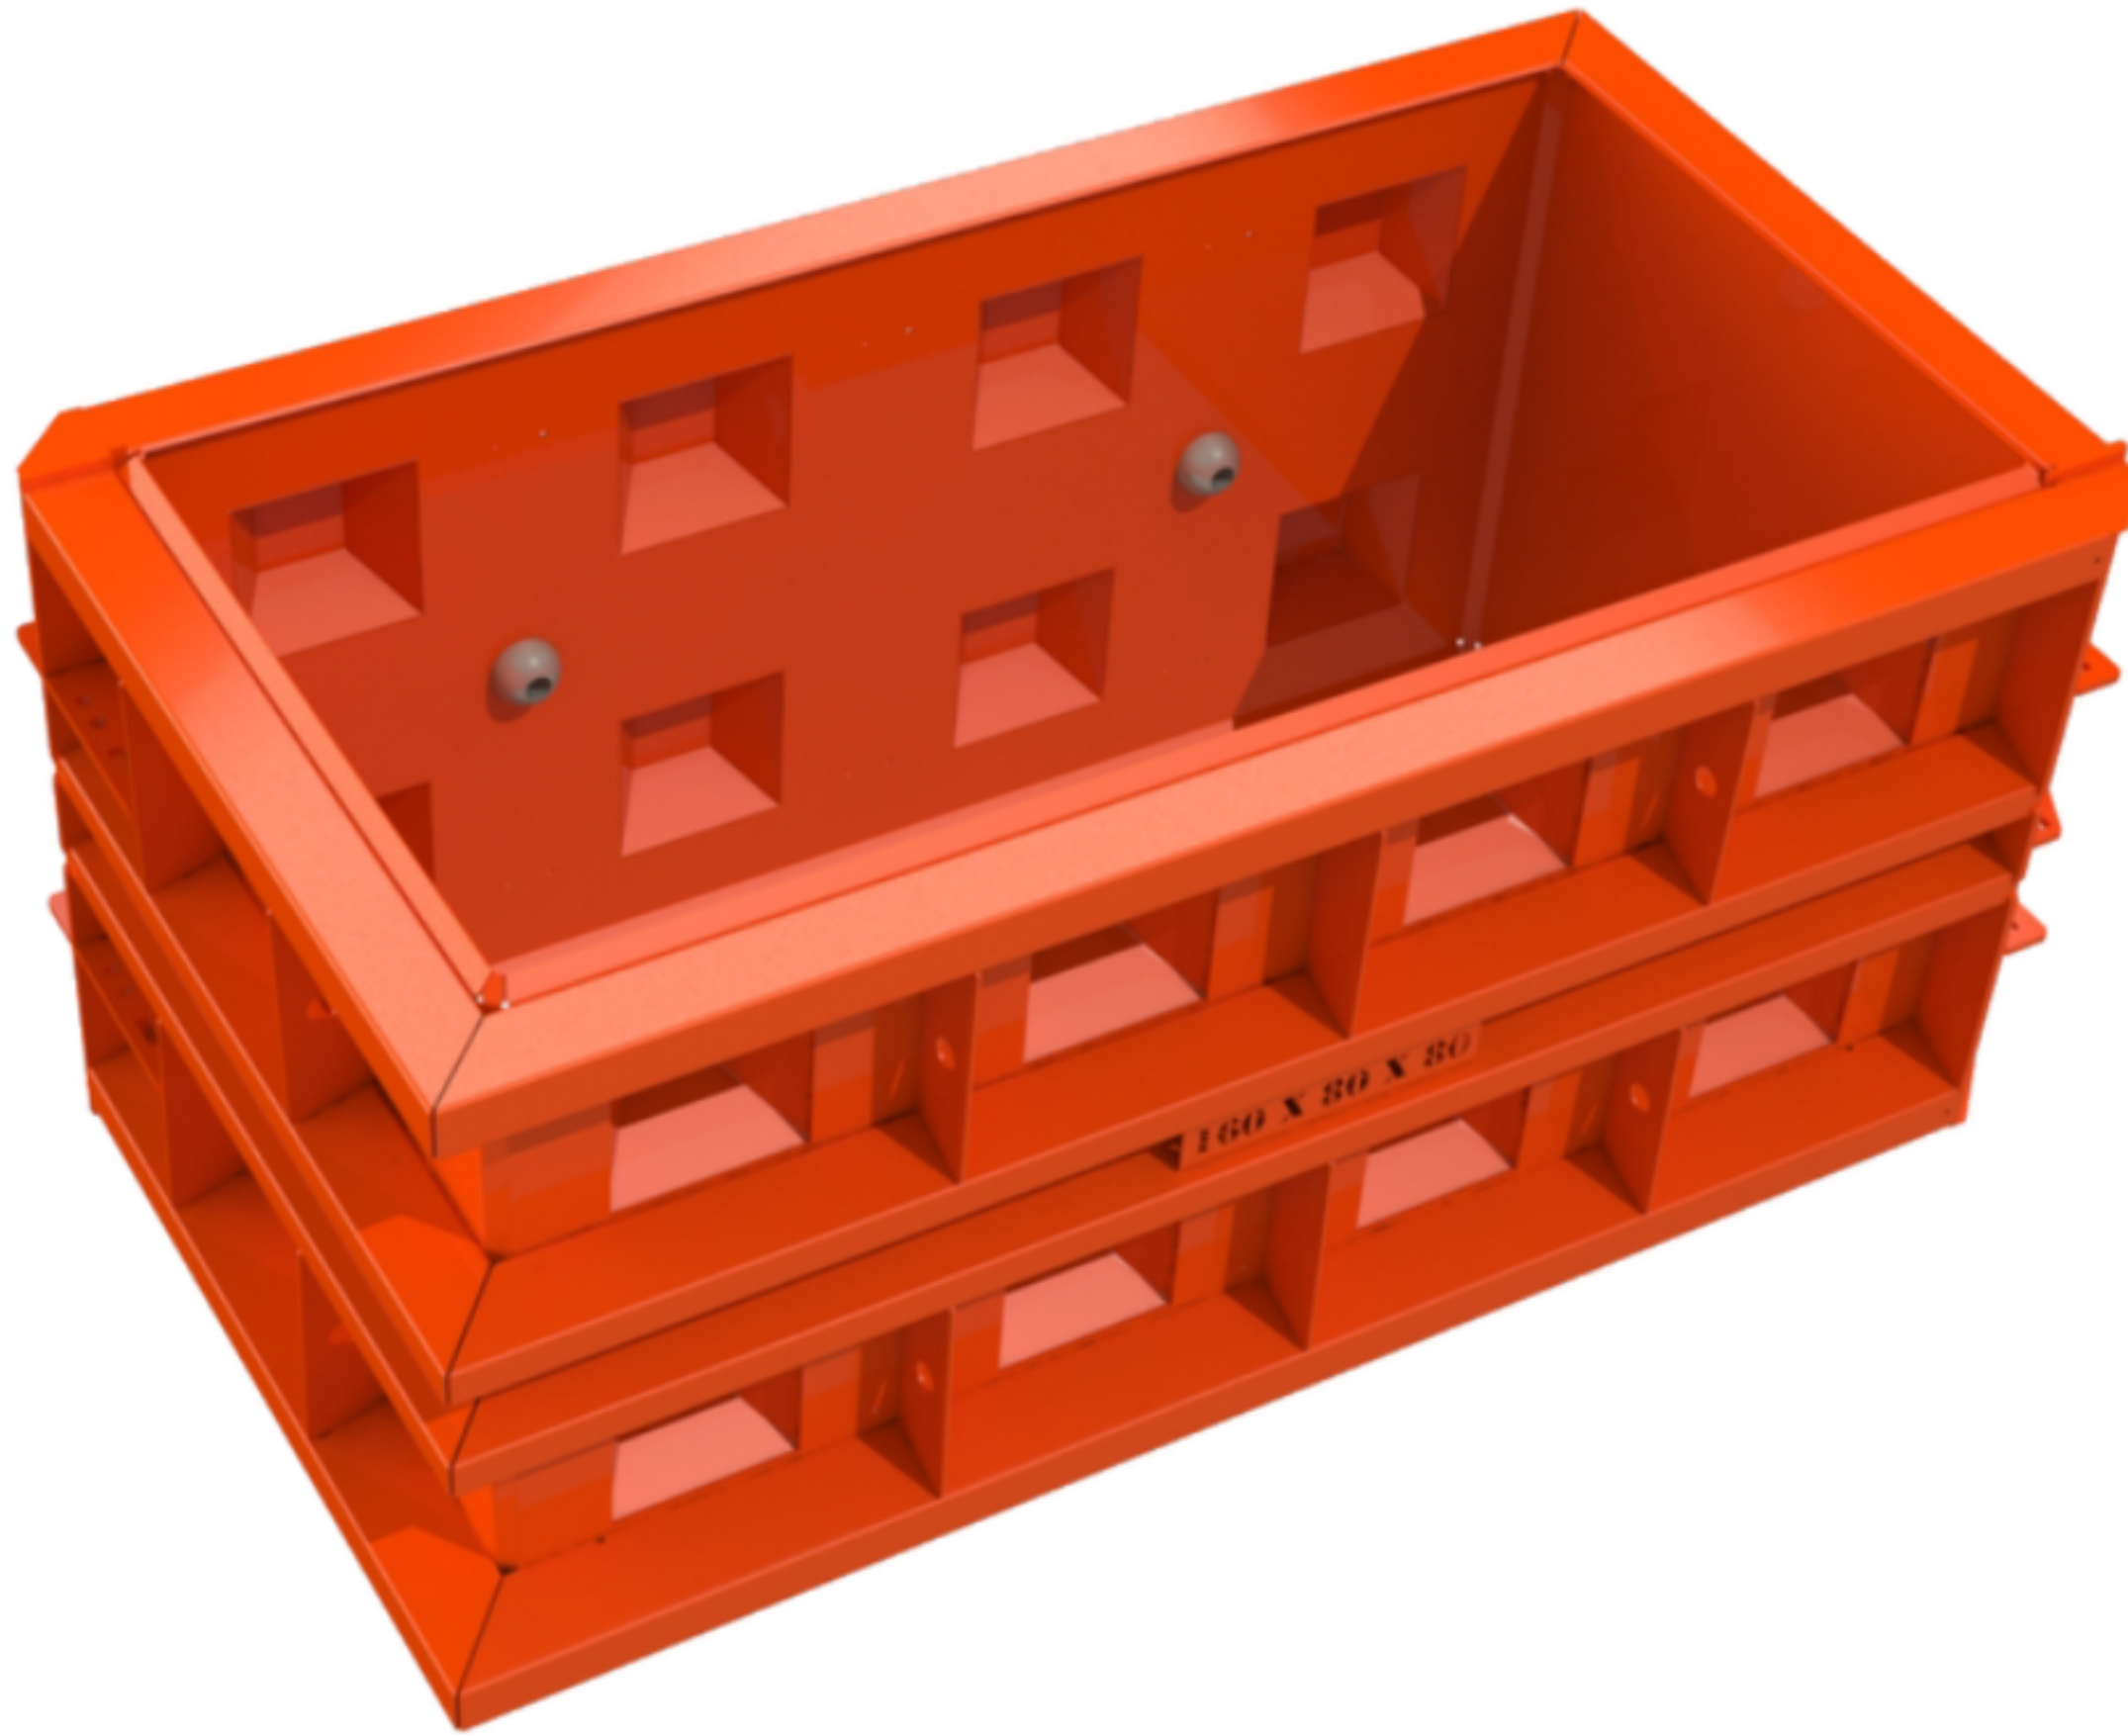


Position the magnets in the mould, centered between the pyramids.

Place the rubber around the pin and insert it into the magnet. Secure the pin to the magnet by inserting the rubber into the hole.

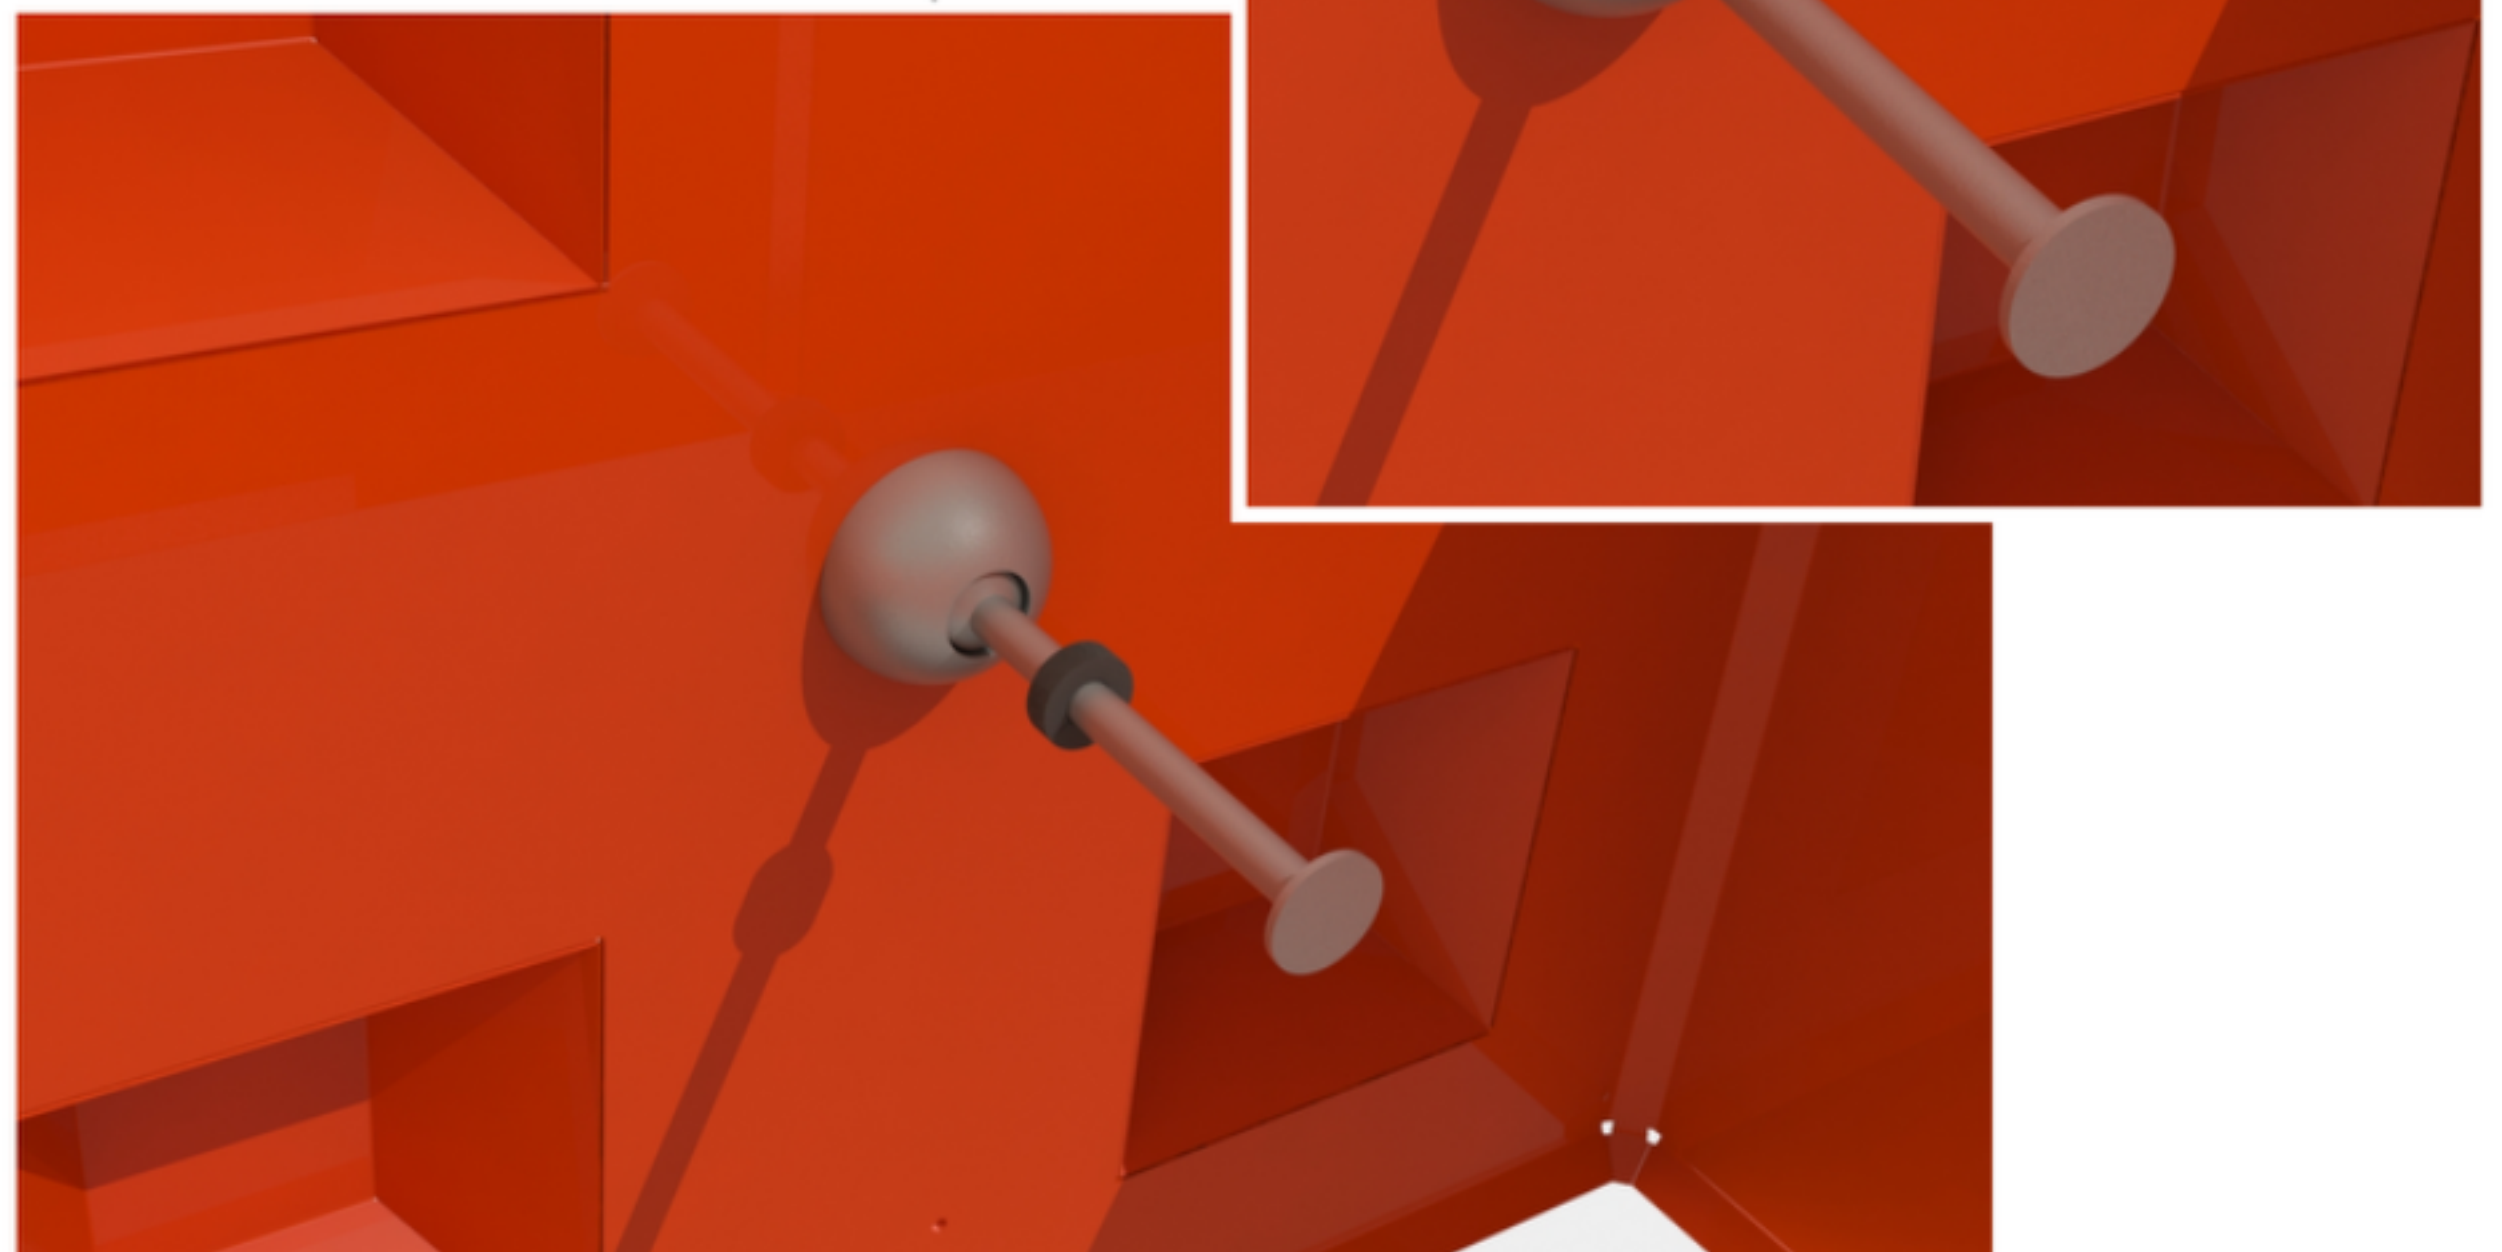


3A Block

HOW IT'S WORK – Lifting Anchors

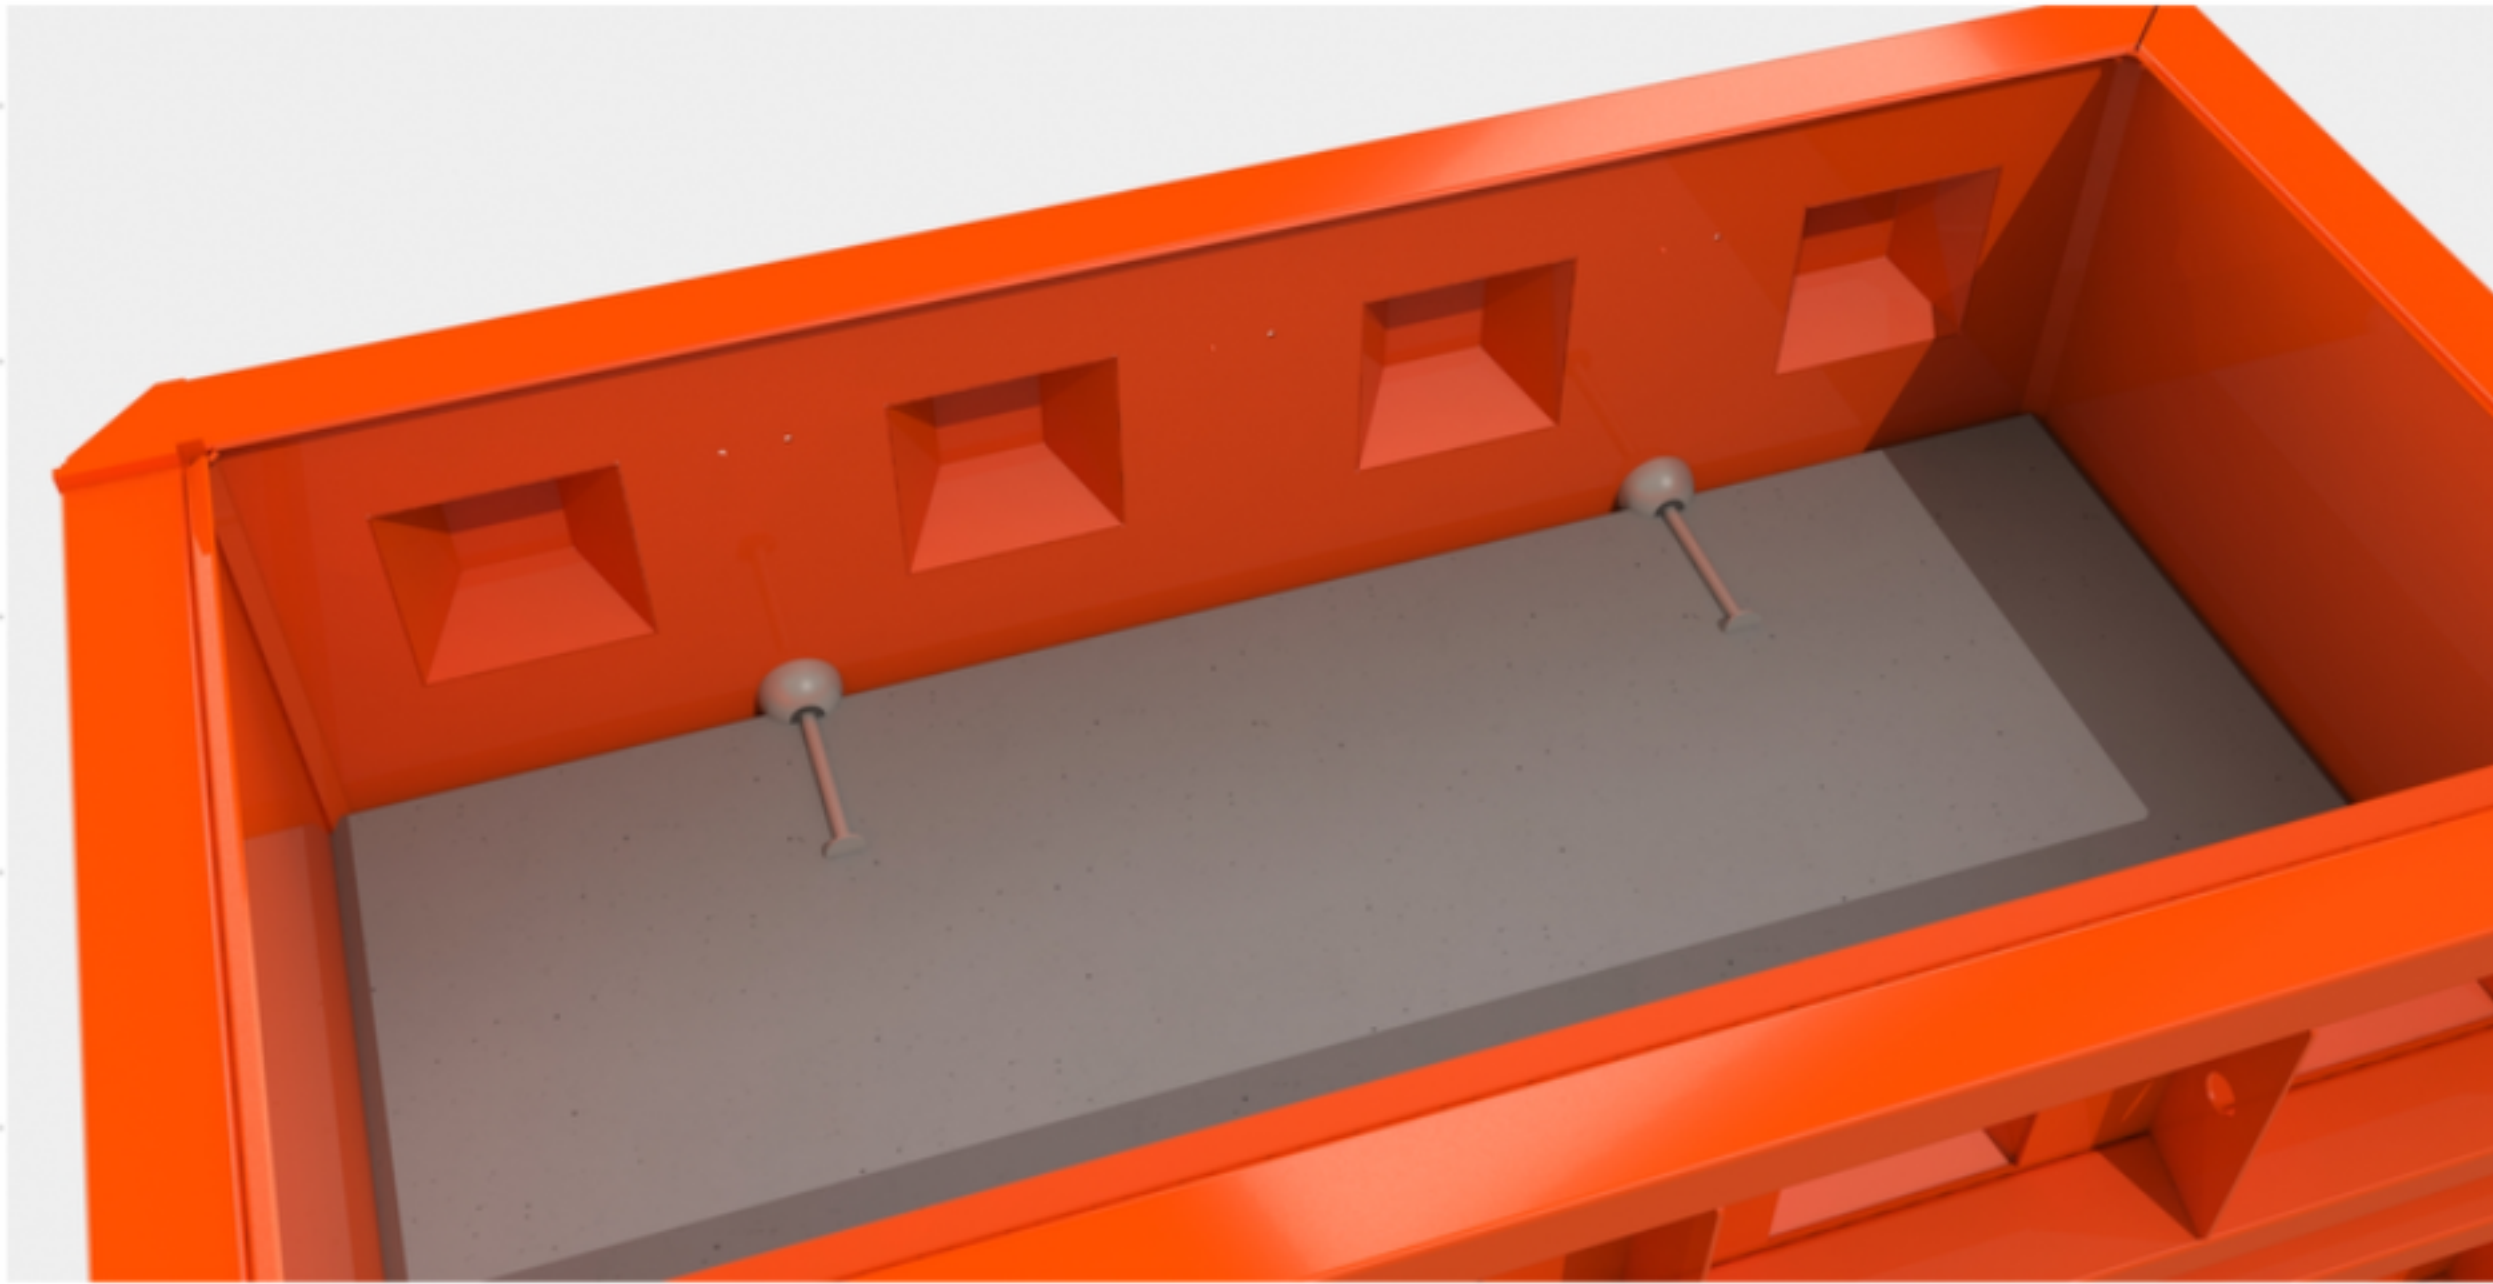


When pouring the concrete, be careful not to detach the pins from the magnets with the vibrator.

After opening the mould, the magnets will stay attached to the mould, while the pins will remain embedded in the concrete, with only their heads visible.

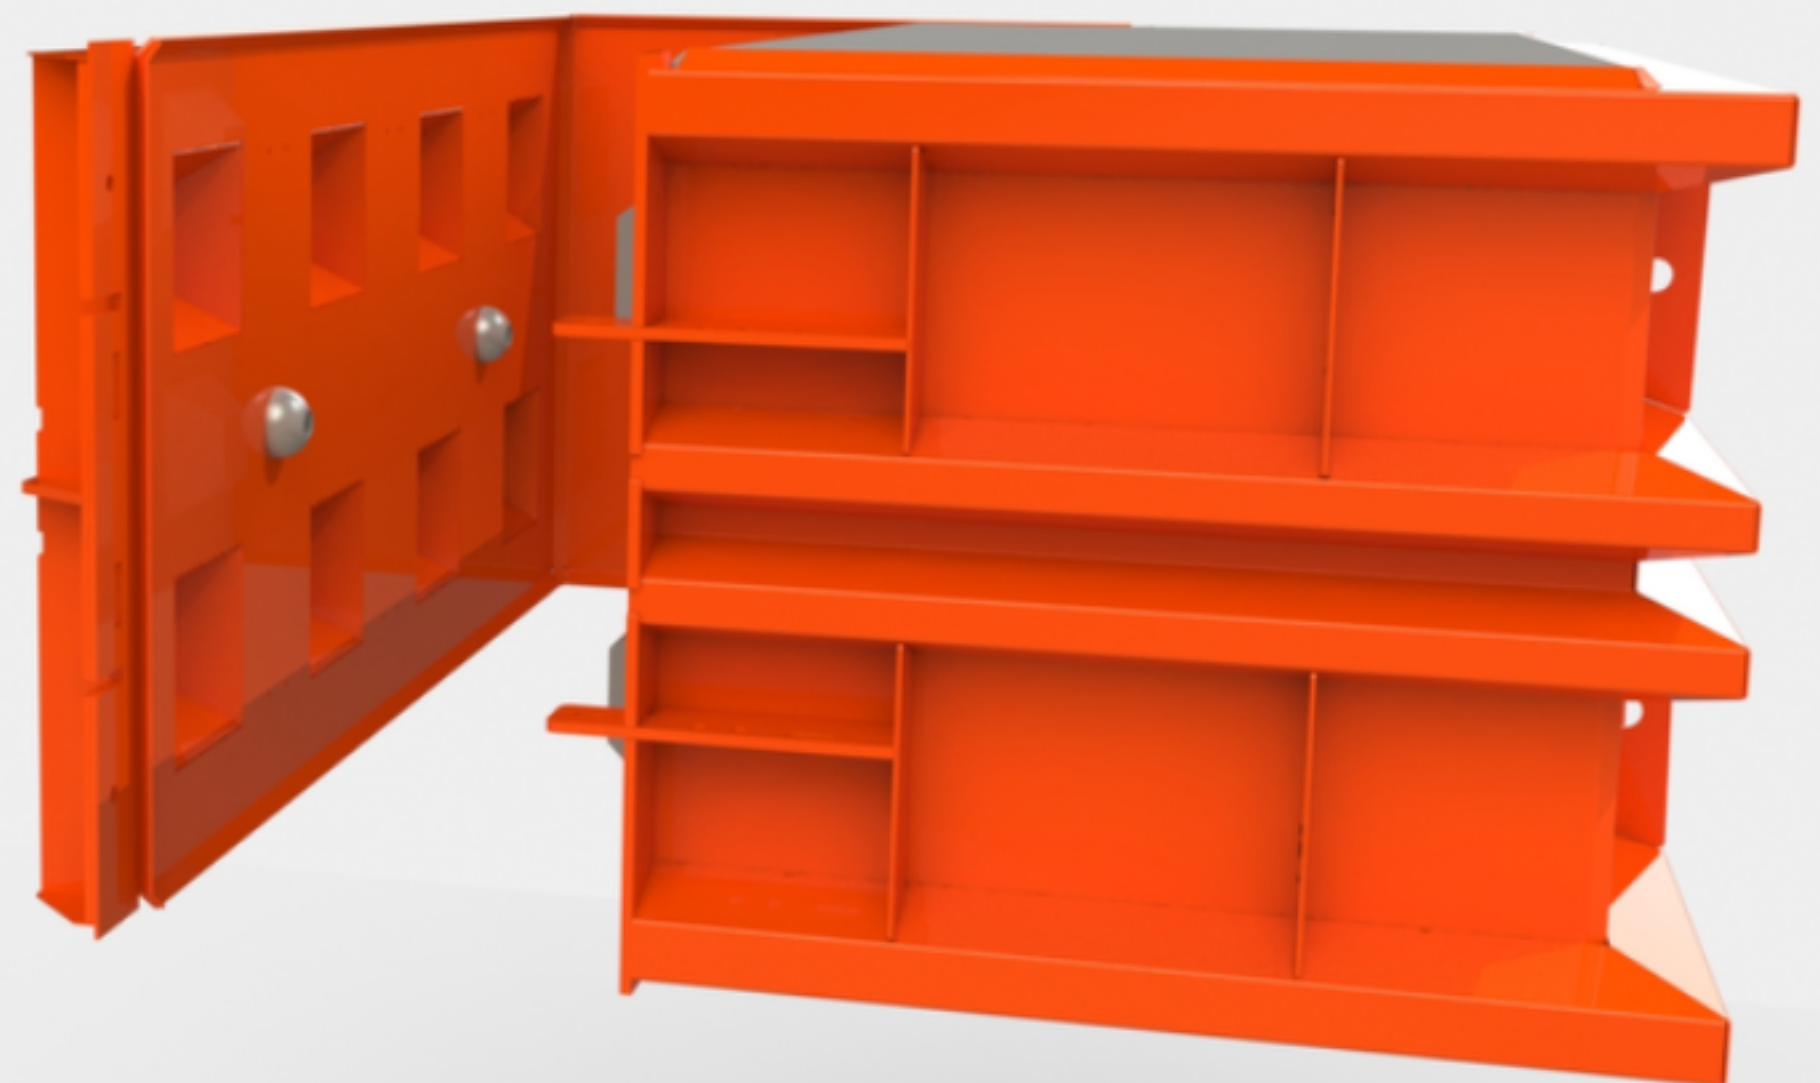



HOW IT'S WORK – Lifting Anchors

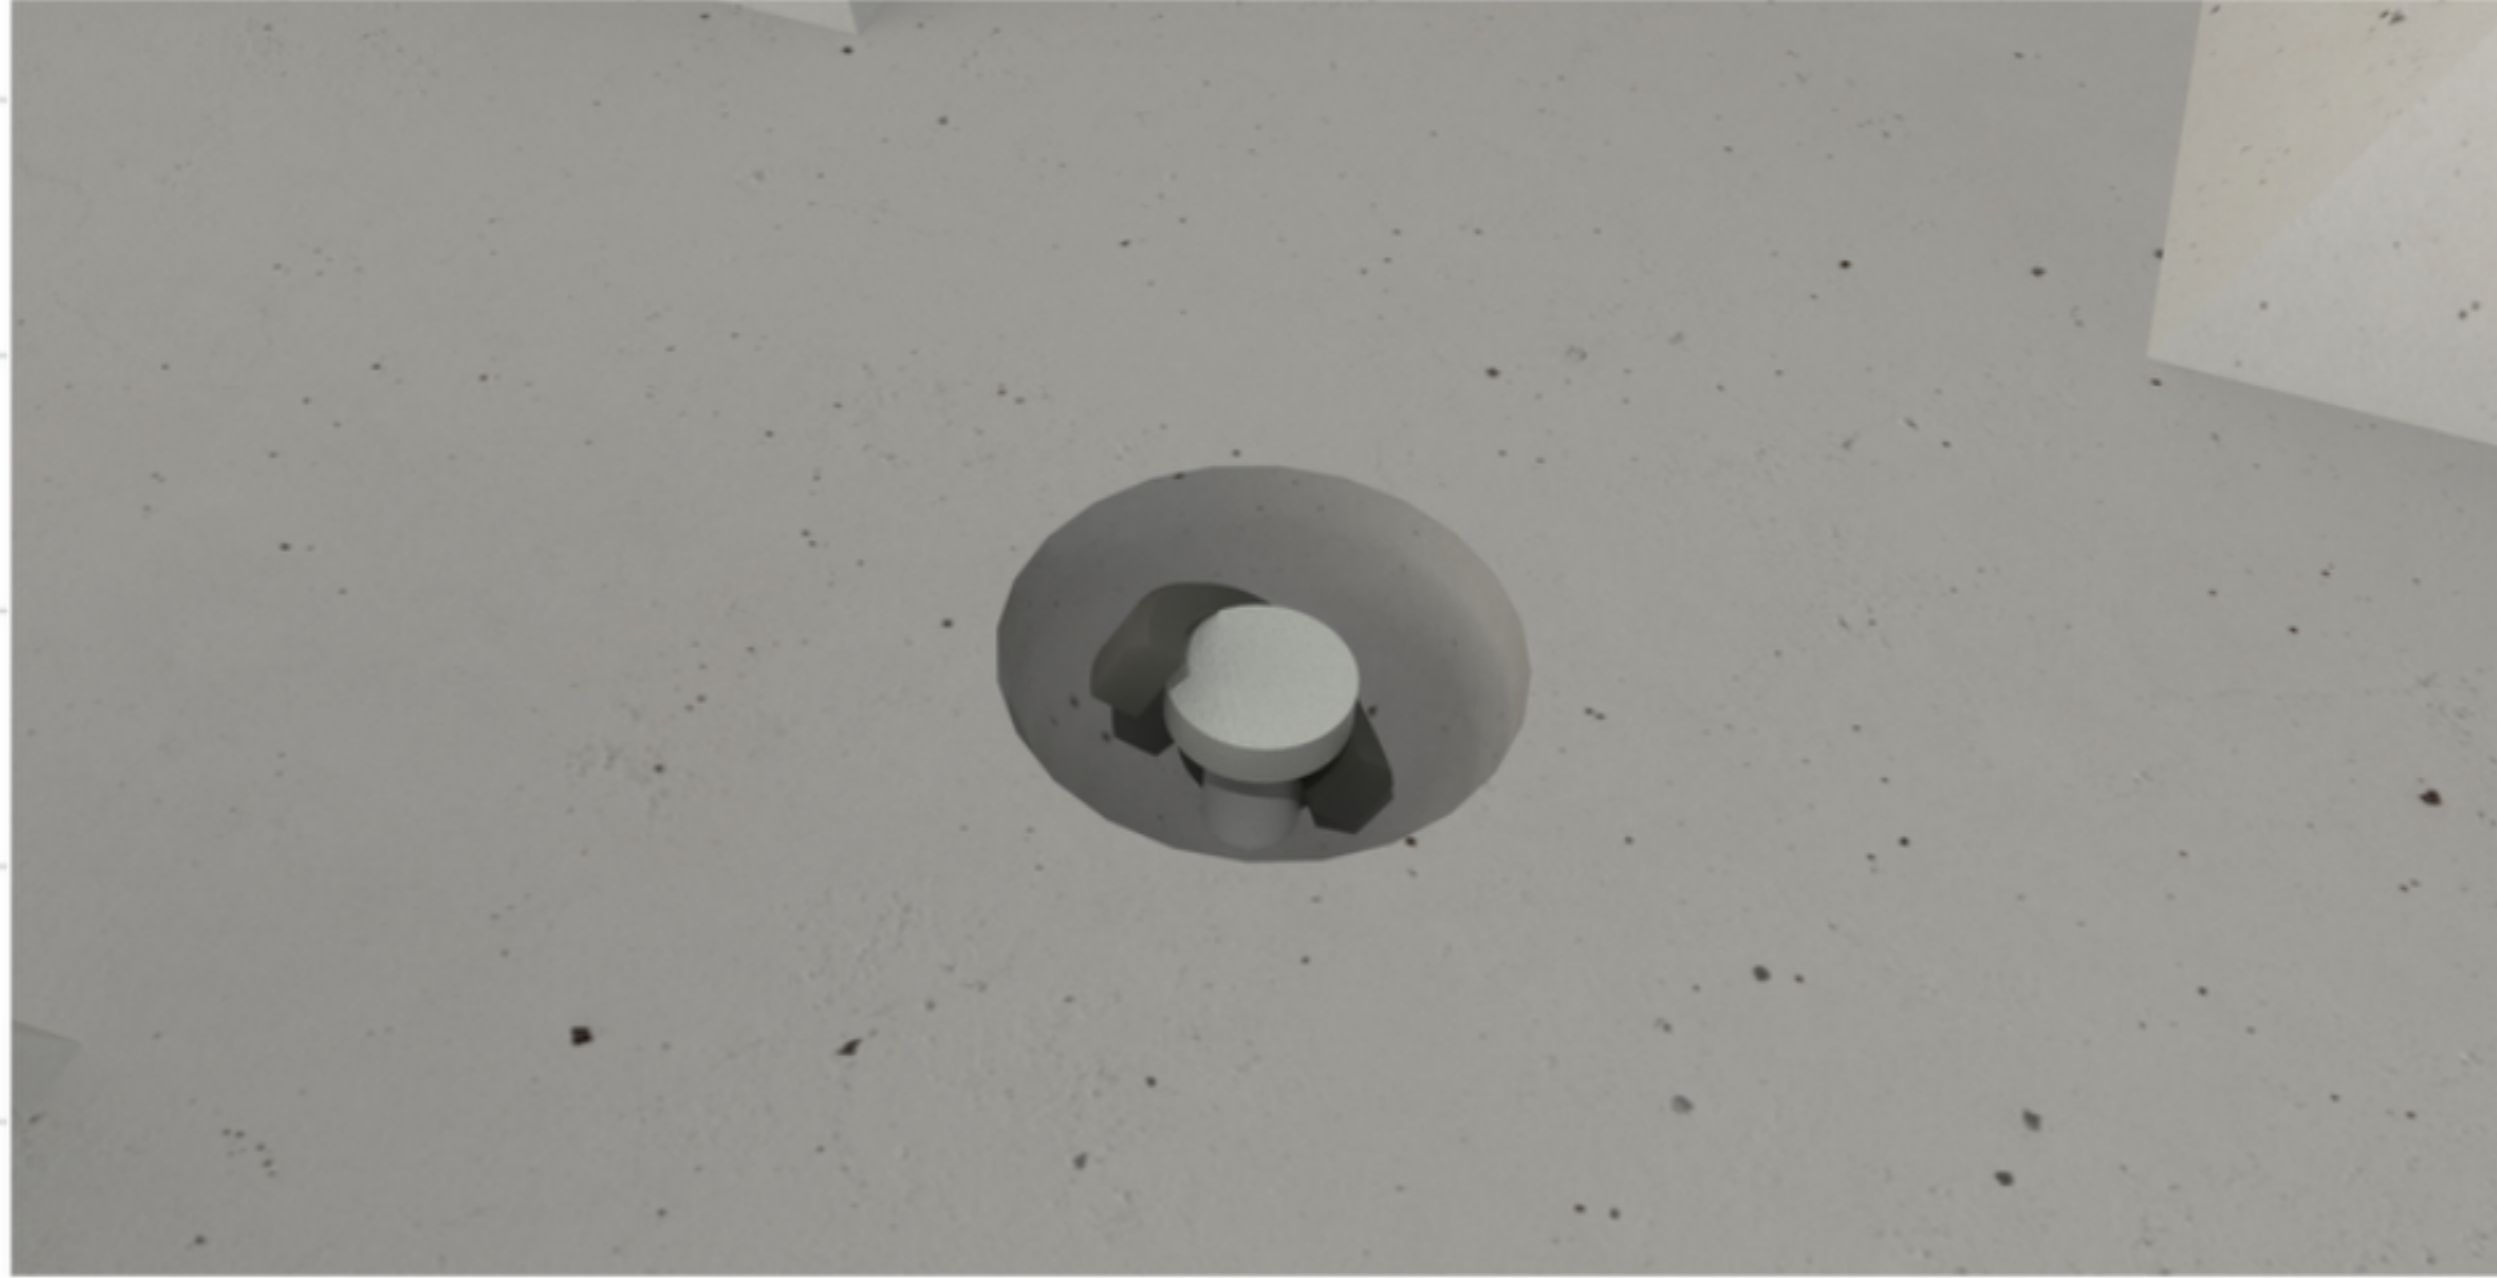

Remove the protective rubber from the pin. You are now ready to lift the block with the lifting clutch

Use the lifting clutch to lift the block. You are now ready; you may begin.

